
TELESCOPIC CYLINDERS HOW TO CHOOSE A TELECSOPIC CYLINDER

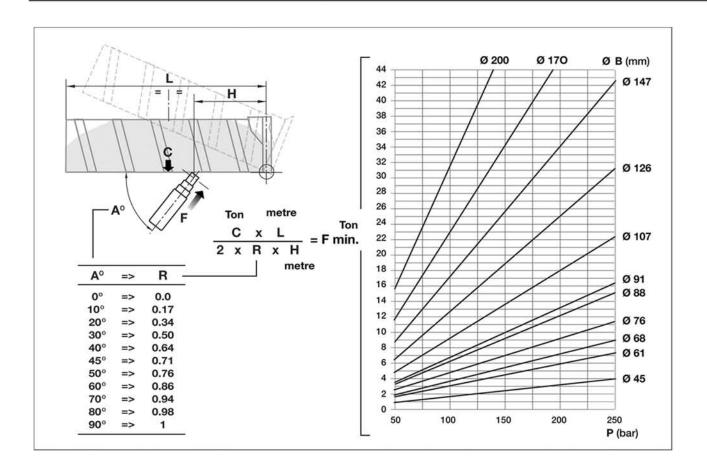

Safety Procedure For tipping

You must ensure that:-

- The load is suitable for the vehicle
- · The ground is stable and flat
- There are neither people nor obstacles around the working area(on the ground and above)
- The load is evenly distributed
- The tyre pressure is correct
- · Do not move the vehicle to discharge sticking loads
- · Do not move the vehicle during tipping
- Should you come across problems whilst tipping, lower the body completely down and check its safe before looking for the problem
- · Never work under an unpropped body

! Not following the safety recommendations may cause damage and place the operator in danger.